

# ThermoBuzz

## Quick Start Guide

---

### I. First steps

1. Power your ThermoBuzz



2. Use the keypad to navigate in the various menus



3. Set the ThermoBuzz using menu settings



**You are now ready !**

### II. Prepare a new Mission

1. Place the temperature sensor where you want to measure temperature




2. Use the keypad to navigate



3. Choose "New Mission" and press OK



4. Scroll the missions list using keypad

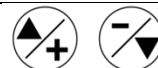

5. Select the mission and press OK



6. Choose the mission settings (depends on the mission)



7. When all set, press OK. The mission will start



8. To stop the mission press "Home" and OK




9. To cancel this press "return"




### III. Use Pre-set Missions


1. Install ThermoBuzz Software using the CD ROM

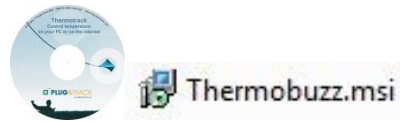


2. Go to settings and select your preferred language

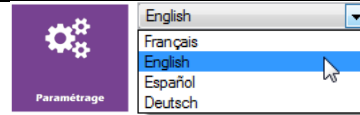

3. Program your next controls (Name, function, settings...)

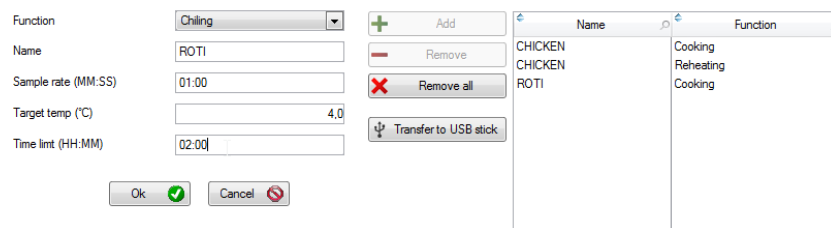

4. Copy missions on the USB Key

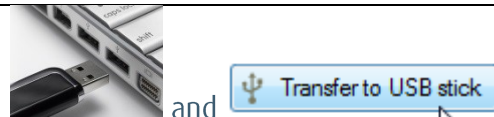

5. Insert the USB Key on the ThermoBuzz



6. Select "Pre-set missions" using the keypad



7. Press OK to see Mission details and press OK again



**You can remove the USB key or leave it on the ThermoBuzz. Does not matter.**

## IV. Transfer data from the ThermoBuzz to the PC

1. Plug the USB Key on the ThermoBuzz and wait until you get the "transfer complete" message



2. Remove the USB Key from the Thermo Buzz
3. Insert the USB Key in the PC. Press "Read" icon



4. Data is saved automatically by date.

